



125W HAND MIXER

INSTRUCTIONS FOR USE




**Thank you for purchasing this product.
Please read these instructions carefully before use**

Trouble with your hand mixer? ...

Try our troubleshooting guide on page 4.

If that does not solve the issue contact us ...

		Postal Address: Customer Service Department Pik-a-Pak Electrical Distributors 38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR
Tel: 01473 271 272	Fax: 01473 270 733	
Email: info@igenix.co.uk	Website: www.igenix.co.uk	
<i>When writing or emailing us to report a fault please ensure you attach a copy of your proof of purchase. Please retain your original</i>		

SAFETY INSTRUCTIONS


Important: This appliance is not intended for use by persons including children with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Please read all instructions carefully before using the hand mixer for the first time.
- Before plugging in the hand mixer, check if the voltage indicated on the rating label corresponds with the main voltage in your home.
- This hand mixer is for household indoor use only. Never use it outdoors.
- Children should not be allowed to play with hand mixer
- Never leave the hand mixer unattended whilst plugged into the mains wall socket.
- Close supervision is necessary when the appliance is used around children or persons with reduced physical, sensory or mental capabilities.
- Do not use for anything other than its intended use.
- Do not immerse the motor unit of the hand mixer or cord in water or any other liquid.
- Do not use it in a bathroom, near water, or outdoors.
- Ensure hands, utensils and clothing are away from beaters during operation to reduce risk of injury.
- Do not mix hot liquids,
- Do not mix foods containing hard objects.
- Do not place hand mixer on or near a hot hob / heated oven.
- Do not pull on the cord to disconnect the plug from the mains wall socket.
- Do not allow the power cord to hang over the edge of the counter where it can be pulled by children.
- Do not use if the power cord or plug is damaged. Do not replace the power cord or any other parts yourself.
- The hand mixer should not be used if it has been dropped or if there are visible signs of damage.
- Always unplug the hand mixer before assembling, disassembling or cleaning.

SPECIFICATION

Supply Voltage:	220-240V ~ 50Hz
Maximum Output:	125W

IG8700 – Hand Mixer at a Glance

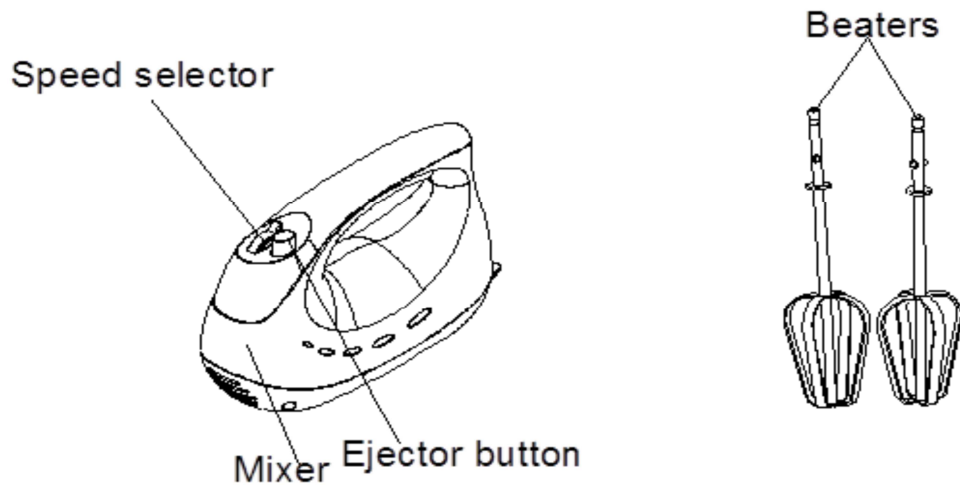

Before First Use


Clean the beaters in warm soapy water, rinse and dry thoroughly.

Using Your Hand Mixer

1. Insert the beaters into the socket underneath the mixer. The beaters are identical and can be inserted into either socket.
2. Ensure that the speed selector is in the OFF position and then plug the hand mixer into the mains power outlet.
3. Turn the speed selector to your desired setting and the beaters will begin to spin.
4. The maximum operation time should not exceed 5 minutes. You should allow the mixer to cool down for a minimum of 10 minutes between cycles.
5. When mixing is complete turn the mixer to the OFF position and unplug the power cord from the mains outlet.

Cleaning and Maintenance

- Unplug the hand mixer from the mains power outlet and allow to cool if the housing has become warm
- Remove the beaters from the mixer by pressing the eject button.
- Wipe the surface of the mixer with a soft damp cloth. Do not use abrasive cleaning products.
- You can scrap excess food particles from the beaters using a wooden or runner spatula.
- Wash the beaters in warm soapy water, rinse and then wipe dry. The beaters are dishwasher safe.

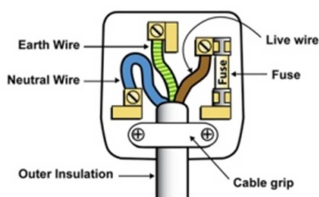

Changing the Plug

This hand mixer must be earthed. Fit a 3A fuse in a 13A BS1363 plug. Fit the green/yellow wire to E, the blue wire to N and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is fitted. If you remove the plug, dispose of it.

Troubleshooting

If you are having problems with your product, please use our troubleshooting guide below. If you are unable to resolve the issue using the guide please ring our Customer Service Department on 01473 271 272. Please have the model code, batch number and purchase information available.

Problem	Possible Cause	Solution
The hand mixer does not work.	<ol style="list-style-type: none">1. The beaters are not in place correctly.2. Not properly plugged into the mains wall socket.3. No electricity in the mains wall socket.4. The motor may have overheated	<ol style="list-style-type: none">1. The mixer will not operate until the beaters are correctly locked in place.2. Plug in firmly.3. Check fuse or breaker.4. The mixer should only be run continuously for a maximum time of 1 minute to prevent the motor from over heating. After 1 minutes use allow the hand mixer to cool down for 10 minutes.

Guarantee Information

2
YEAR GUARANTEE

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.

The warranty **does not** cover consumable parts that require replacement under normal use or accessories. This includes beaker, belts, and accessory attachments.

1. If a fault develops within 28 days of purchase the item should be returned to the place of purchase for exchange.
2. If the fault develops after 28 days and within 24 months of purchase please contact our customer service department 01473 271 272 or write to us at the address detailed below.

Please quote the model number which begins **IG**, the 'Batch Number' beginning '**5**' and give details of the exact fault.

We will then decide whether to repair or replace the item. You will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced under guarantee within 2 years, the guarantee for the replacement item will be calculated from the purchase date of the original.

Before calling the Customer Service number please ensure you have checked the Troubleshooting guide.

IGENIX

Tel: 01473 271 272

Email: info@igenix.co.uk

Fax: 01473 270 733

Website: www.igenix.co.uk

Postal Address:

Customer Service Department
Pik-a-Pak Electrical Distributors
38 Bluestem Road,
Ransomes Europark,
Ipswich, IP3 9RR

*When writing or emailing us to report a fault please ensure you attach a copy of your proof of purchase.
Please retain your original*

Disposal of Old Electrical Appliances



The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

Disclaimer

Updates to hardware components are made regularly. Therefore some of the instructions, specifications and pictures in this documentation may differ slightly from your particular situation. All items described in this guide are for illustration purposes only and may not apply to your particular situation. No legal right or entitlements may be obtained from the description made in this manual.



Follow us on Twitter
@Igenix_Products

View the range online at www.igenix.co.uk